INSTALLATION GUIDE AND USERS MANUAL

Ceiling Recirculation Kit for Range Hoods



NOTICE: For residential use only.
Installer: Leave this guide with the homeowner.
Homeowner: Keep this guide for future reference.

Rev.20250401

TABLE OF CONTENTS

Recommended Tools 3

Parts Supplied & Dimensions 3


Installation Method 4

Filter Change Method 5

Duct Installation 6


Duct Installation (Continued)..... 7

RECOMMENDED TOOLS

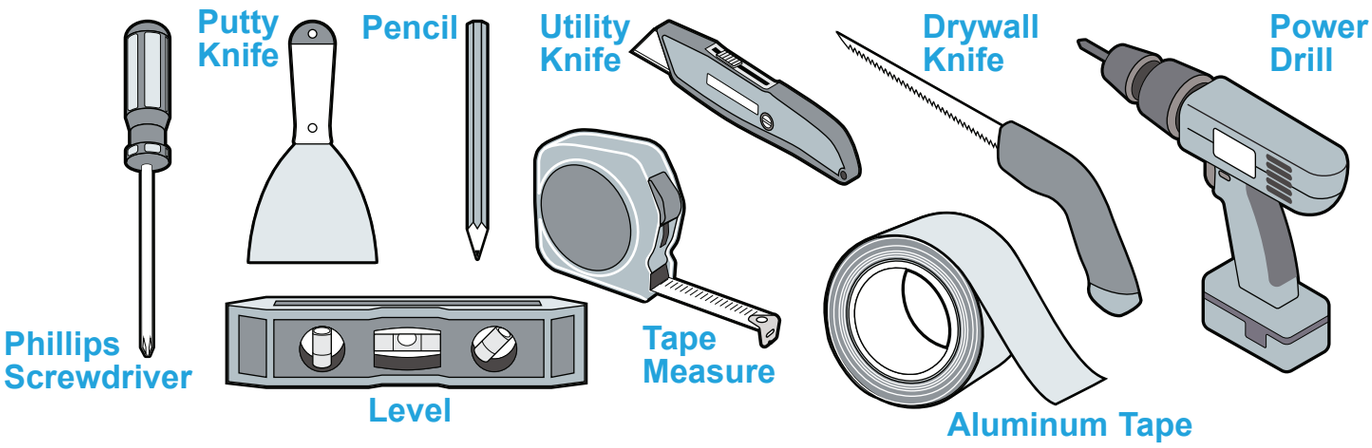


PARTS SUPPLIED & DIMENSIONS

Recirculation Kit

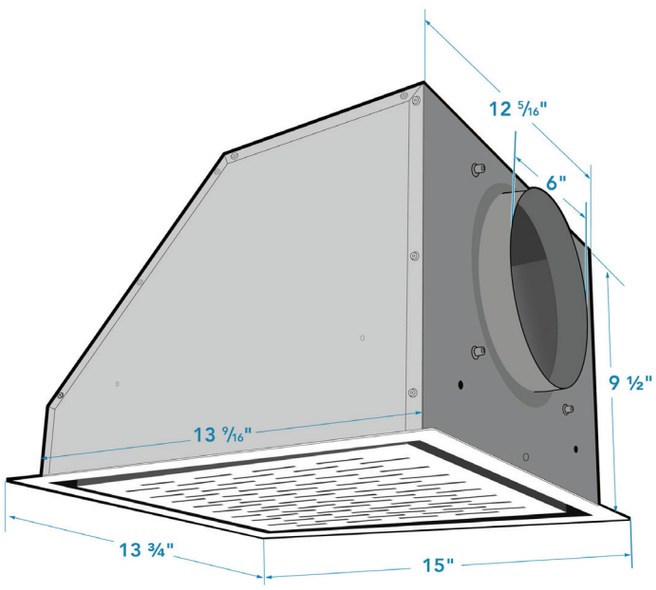

HEPA / Charcoal Combination Filter (x1)

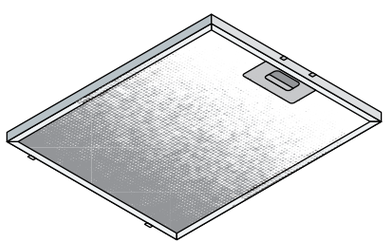


NOTE:
Where necessary, additional screws may be needed for installation and added support, but may not be included. Please review contents before installation.

INSTALLATION METHOD

NOTE:

Installation shown with Ceiling Hood for reference.

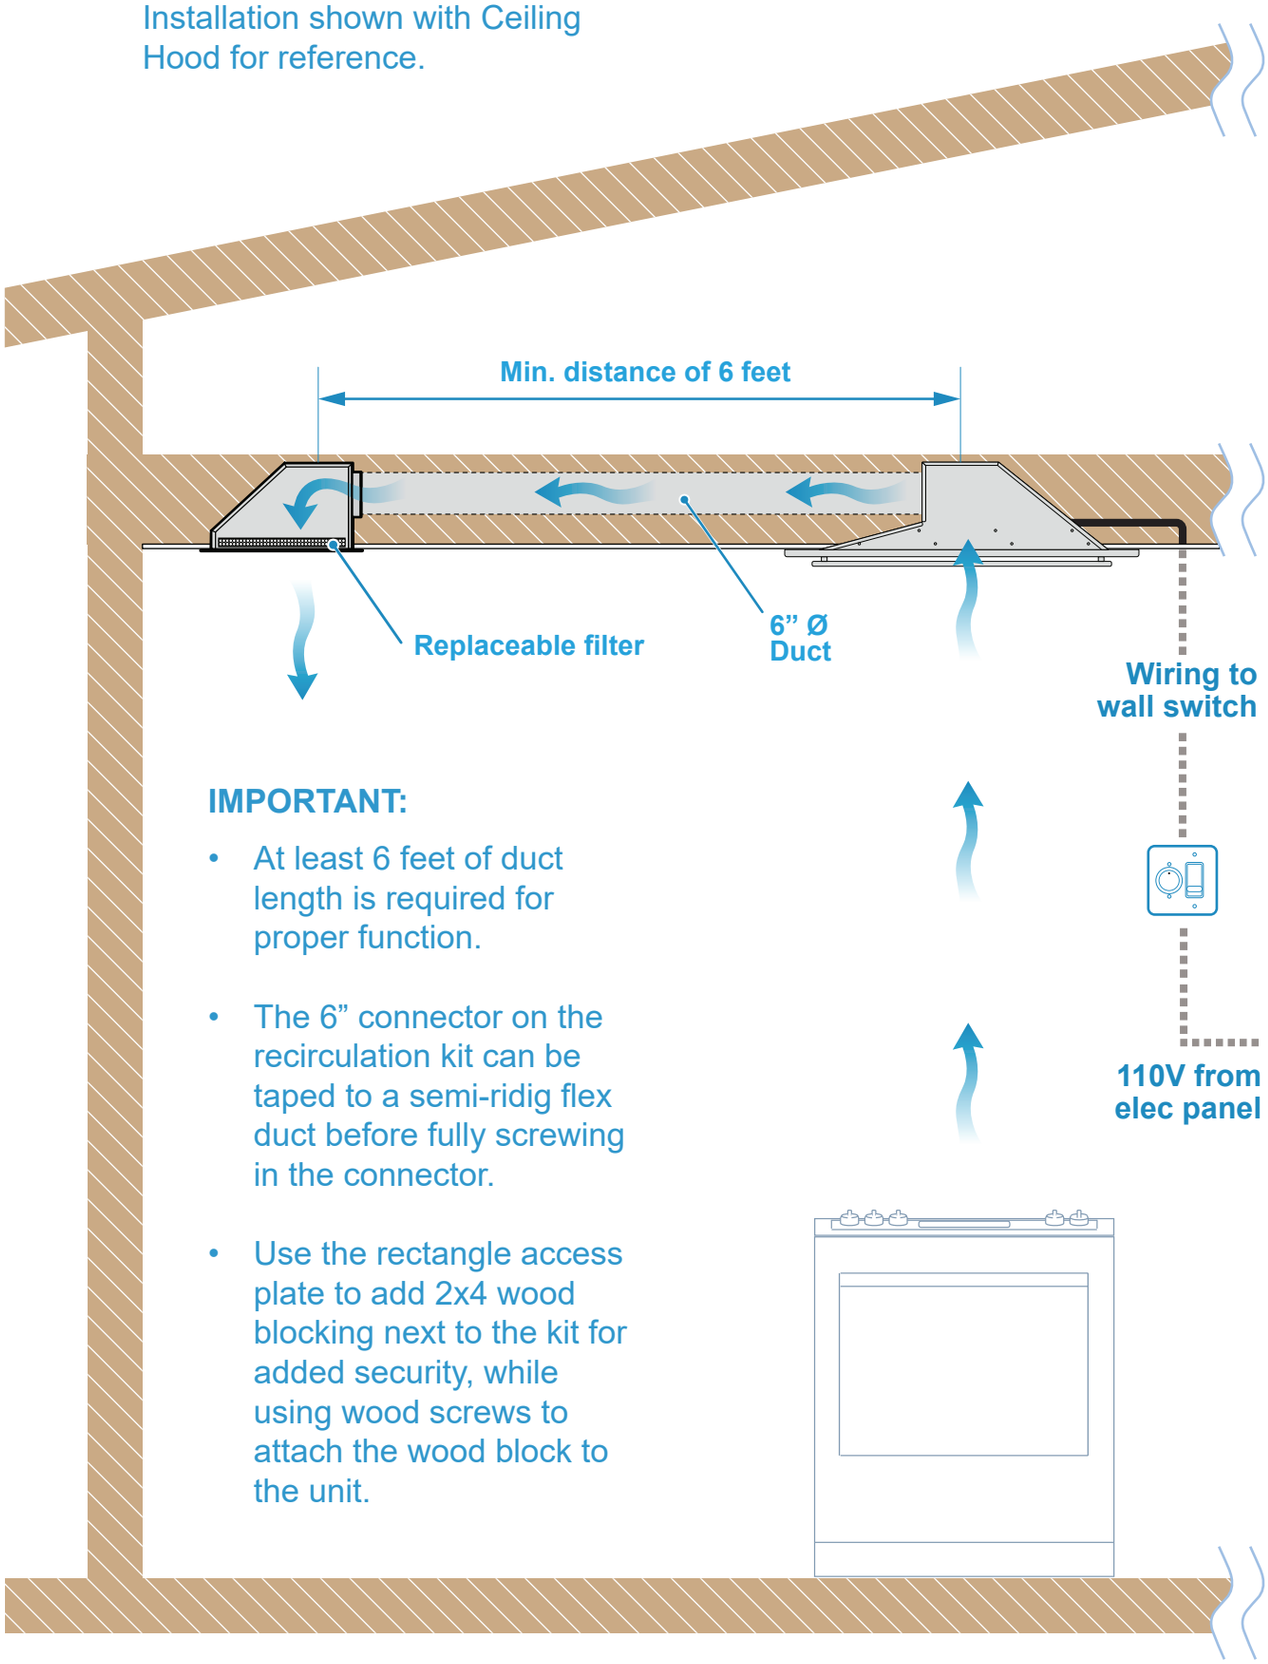


IMPORTANT:

- At least 6 feet of duct length is required for proper function.
- The 6” connector on the recirculation kit can be taped to a semi-ridig flex duct before fully screwing in the connector.
- Use the rectangle access plate to add 2x4 wood blocking next to the kit for added security, while using wood screws to attach the wood block to the unit.

FILTER CHANGE METHOD


Step 1:

Open the bottom panel door.

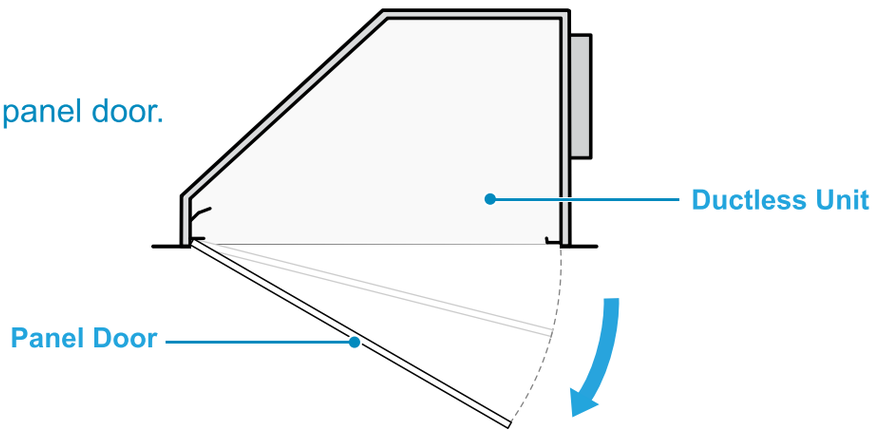


Step 2:


With the white side facing down, insert the filter into the unit.

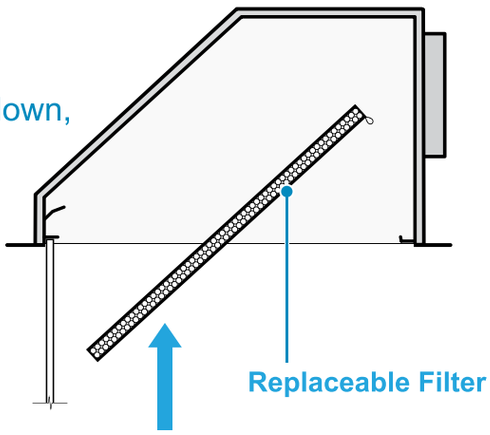

Step 3:

Pull back the front side into the slot provided.

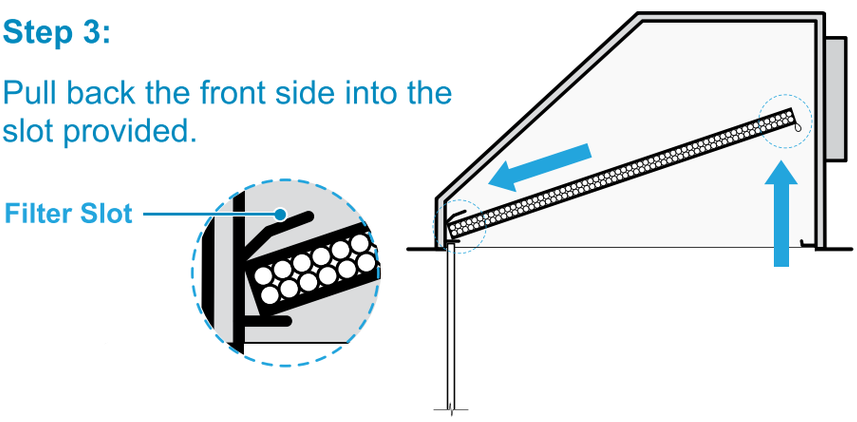

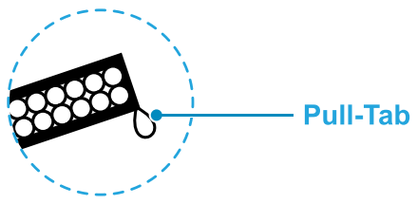


Step 4:


Use the pull-tab on the back to pull the backside down to secure it in place.

Step 5:

Ensure the filter sits flat before swinging the bottom panel door close.

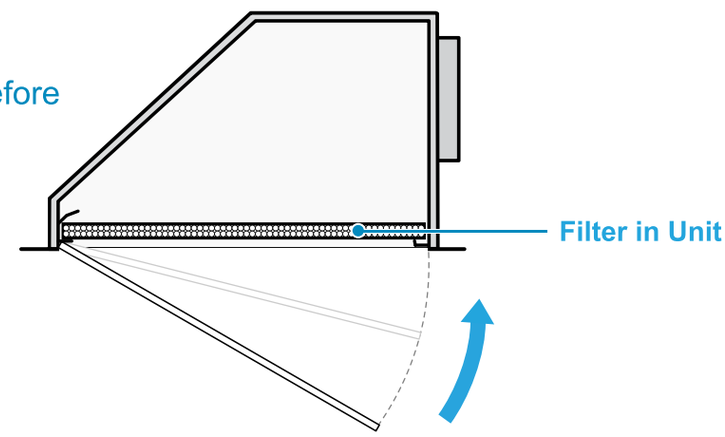


DUCT INSTALLATION

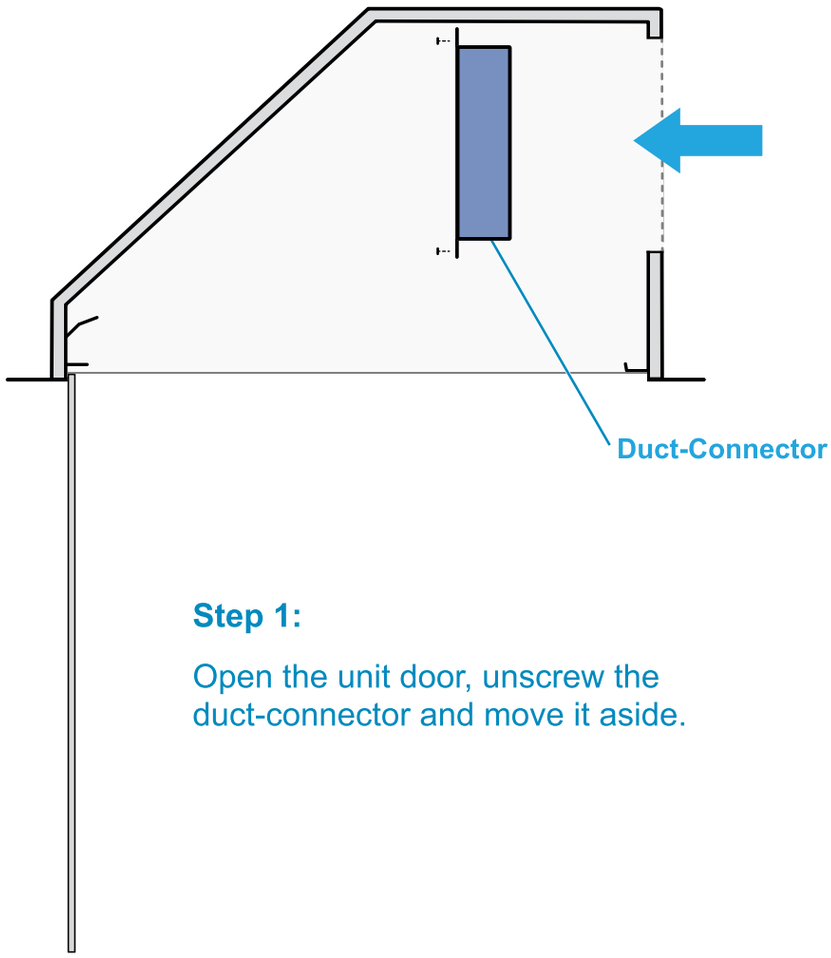

Step 1:


Open the unit door, unscrew the duct-connector and move it aside.

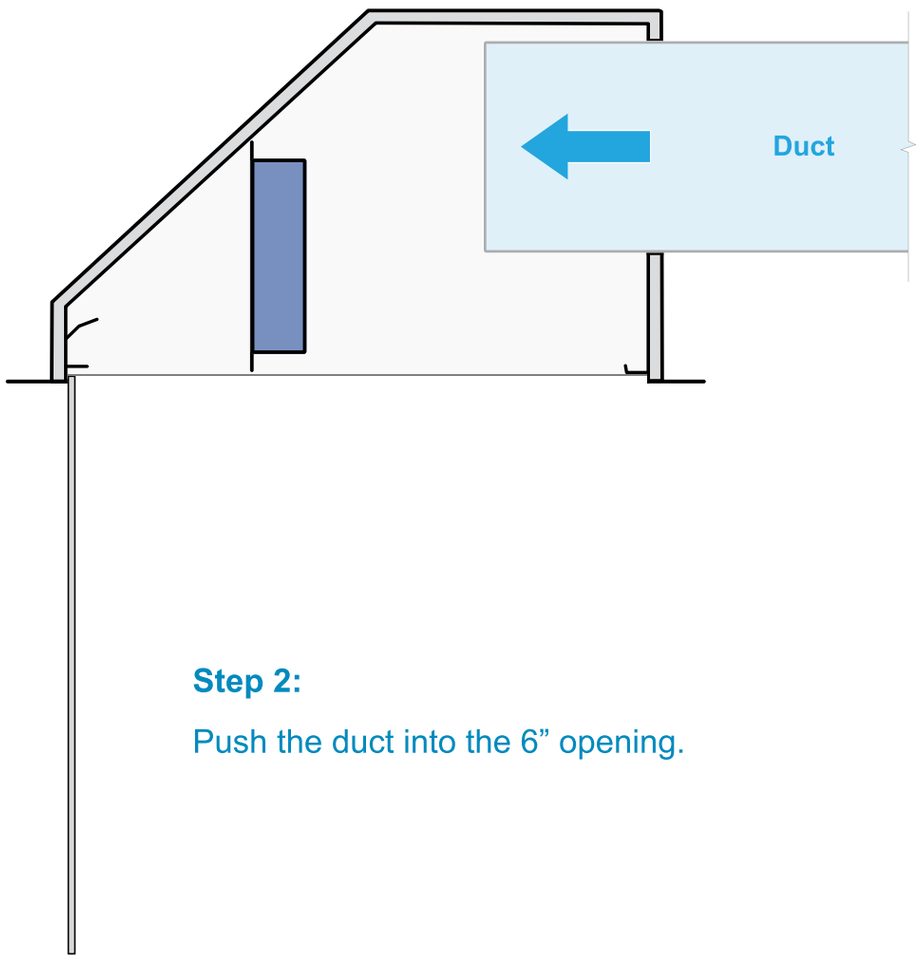

Step 2:


Push the duct into the 6” opening.

DUCT INSTALLATION (Continued)

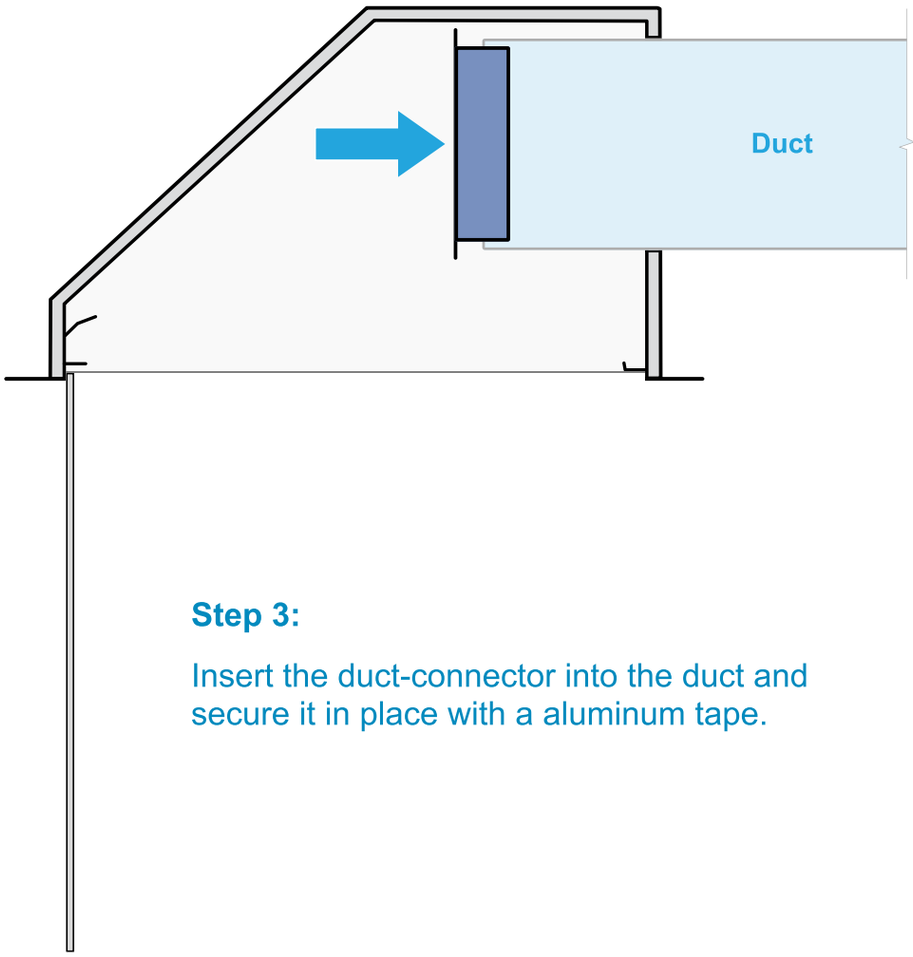

Step 3:

Insert the duct-connector into the duct and secure it in place with a aluminum tape.

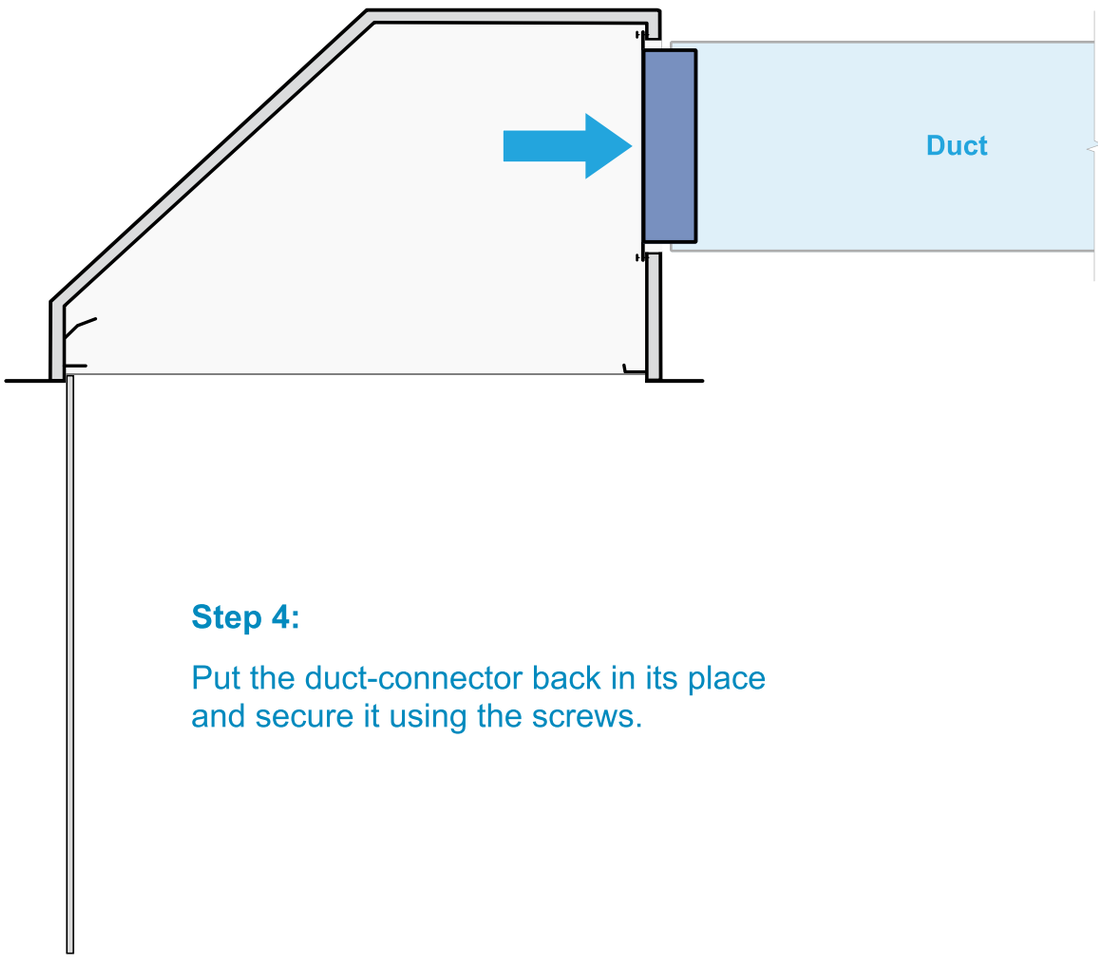

Step 4:

Put the duct-connector back in its place and secure it using the screws.